



Jumper setting JP1:  
 1-2: Drives need enable signal low to be active.  
 2-3: Drives need enable signal high to be active.  
 Jumper setting JP2:  
 OFF: Normal = chargepump enabled  
 ON: For testing = chargepump disabled

E	D	C	B	A	Drawn	Check	Projection	Sheet
Drn	Drn	Drn	Drn	Project	18/03/15	18/03/15	Do Not Scale	1 of 2
Chk	Chk	Chk	Chk	Title	Client			Drawing No.
				4 Axis Breakout board 1.1				Filename
				LDT006				