


+VM: Drive supply 12-40 VDC

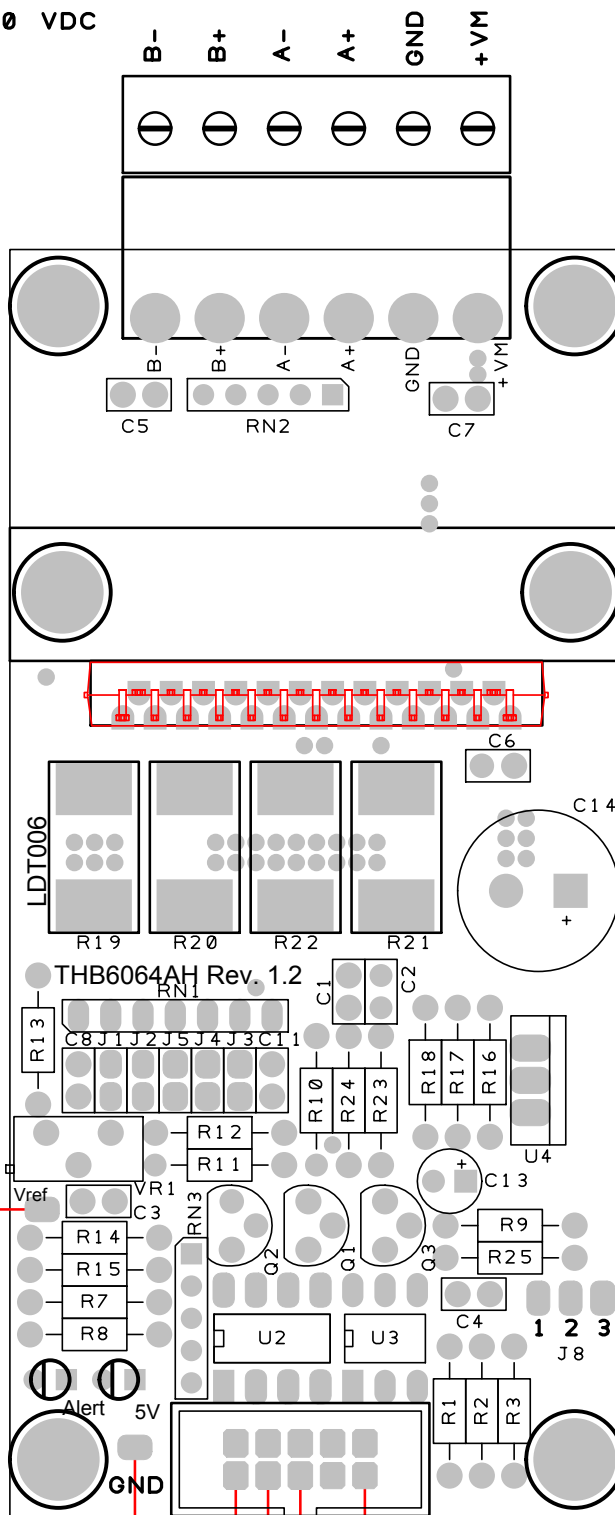

JUMPER SETTINGS:

Microstepping mode

J3	J4	J5	
ON	ON	ON	half
	ON	ON	8th
ON		ON	10th
		ON	16th
ON	ON		20th
	ON		32nd
ON			40th
			64th

Decay

J1	J2	
ON	ON	20%
	ON	40%
ON		60%
		80%

Vref Testpin

GND Testpin

Motor current, adjust by VR1:
 0.6V at Vref per Amp. Examples:
 1A = 0.6V at Vref
 2A = 1.2V at Vref
 3A = 1.8V at Vref

+5V PC-side
 Step
 Dir
 Enable (*1)

IMPORTANT: These values are with a running motor.

Note 1: J8 jumper setting:
 Polarity of enable input signal:
 1-2 enabled when input = High
 2-3 enabled when input = Low

THB6064AH traditional version Rev. 1.2